



INSTALLER NOTES

1. Provided mounting hardware may not be appropriate for all types of rack. Installer may need to acquire additional or other type fasteners.

Rack Back® Hinge Gates

- 1. Locate gate hinge brackets (brackets with pins attached) and machine bushings.
- 2. Use 3/8" x 1" bolts to install gate hinge bracket on outside corners of gate panel (pins should be pointing in opposite directions after installed).
- 3. Install only lower receiver bracket (bracket with no pin) on rack upright at desired sweep space.
- 4. Place bushing over hinge pin, and lift gate into place so that lower hinge pin fits into lower receiver bracket.
- 5. Place upper receiver bracket over hinge pin and fasten receiver to rack.

FRONT VIEW

- a. Check that top of gate is level, and overall operation of gate.
- 6. If double hinge gate, repeat procedure for opposite door panel.
 - a. Use same sweep space dimension as first panel.
 - b. Check that gap between doors is sufficient for operation of doors and lock device, if not adjust mount brackets appropriately.
- 7. If single hinge gate, align padlock lug with door lug and attach to rack.

